

- ★ READ THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DO NOT DISCARD CAREFULLY THIS INSTRUCTION MANUAL UNTIL ALL OF THE TUBES IN THIS BOX ARE USED UP.

1. PERFORMANCE:

Measuring Range	: 0.05 - 0.6% (*)	0.1 - 1.2 %
and Pump Stroke	: 1 pump stroke	1/2 pump stroke

(*) Graduations on the detector tube are based on 1 pump stroke.

Sampling Time	: 1 minute	0.5 minutes
Colour Change	: white → Dark brown	
Detectable Limit	: 0.001% (1 pump stroke)	
Operating temperature	: 0 - 40 °C (32-104°F) (No temperature correction is necessary.)	
Aspirating Pump	: Model AP-20, AP-20S, 400B	

⚠ CAUTION

1. THE DETECTOR TUBE CONTAINS CHEMICAL REAGENTS .
2. DO NOT TOUCH THESE REAGENTS DIRECTLY ONCE TUBES WERE BROKEN.
3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.

NOTICE

1. USE ONLY PUMP MODELS AP-20, AP-20S, 400B. OTHERWISE, CONSIDERABLE ERROR IN INDICATION MAY OCCUR.
2. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS. (REFER TO ITEM 8. INSPECTION OF ASPIRATING PUMP.) ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
3. DO NOT USE THIS TUBE OUTSIDE THE STATED OPERATING TEMPERATURE RANGE.
4. STORE TUBES IN A COOL AND DARK PLACE (0-25 °C/32-77°F), AND USE BEFORE EXPIRATION DATE PRINTED ON THE TOP OF THE BOX.
5. PRIOR TO USE, READ ITEM 9. USER RESPONSIBILITY CAREFULLY.
6. READ THE CONCENTRATION IMMEDIATELY AFTER DRAWING THE SAMPLE.

2. SAMPLING AND MEASUREMENT:

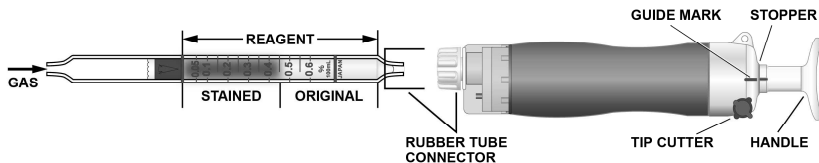


Fig.1

- ① Break both ends of the detector tube.

⚠ CAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.

- ② Insert the detector tube into aspirating pump securely as shown in Fig.1. (Arrow mark shall point to the pump.)
- ③ Align the guide marks on the handle and stopper of the aspirating pump.
- ④ Pull the pump handle at a full stroke until it locks and wait for 1 minute or until the completion of sampling is confirmed with the flow indicator of the pump. (See descriptions about the flow indicator in the instructions manual of the pump.)
- ⑤ On completion of sampling, read the scale at the maximum point of the stained layer.
- ⑥ If the discolouration is over the scale, change the tube and pull 1/2 strokes.
 - 1) Insert the new tube to the pump inlet. Pull the handle at 1/2 strokes (to 50mL line), and it will be automatically locked. Leave it for 0.5 minutes as it is.
 - 2) Remove the detector tube from the pump and read the concentration.
 - 3) Then multiply the reading value by 2.

- SPECIAL NOTE**
- I . The scale is calibrated at 20 °C (68°F), 50 %R.H. and 1013hPa. Readings obtained in other circumstances should be corrected. (**REFER TO ITEM 3 CORRECTION FOR AMBIENT CONDITIONS.**)
 - II . When the maximum of the stained layer is unclear or oblique, read the scale at the centre between the longest and shortest points.

3. CORRECTION FOR AMBIENT CONDITIONS:

 
- ① Temperature; No correction is necessary.
- ② Humidity; No correction is necessary.
- ③ Atmospheric Pressure ;

$$\text{True concentration} = \text{Tube reading} \times \frac{1013}{\text{Atmospheric pressure (in hPa)}}$$

4. INTERFERENCES:

Sulphur dioxide does not change this tube by itself but the coexistence of more than 0.3% with Hydrogen sulphide will give lower reading. Ammonia produces a blue stain and Methyl mercaptan produces a pale yellow stain but each coexistence with Hydrogen sulphide does not affect accurate readings.

5. CHEMICAL REACTION IN THE DETECTOR TUBE:



6. DISPOSAL OF TUBES:

USED TUBES SHOULD BE DIPOSED CAREFULLY ACCORDING TO RELEVANT REGULATIONS, IF ANY.

7. HAZARDOUS AND DANGEROUS PROPERTIES OF HYDROGEN SULPHIDE :

TLV-TWA . ◆ 1 ppm
Explosion range in air 4.0 - 45.5 %

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2019.

8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks;

- ① Insert a sealed, unbroken detector tube into the pump.
- ② Align the guide marks on the shaft and stopper of the pump.
- ③ Pull the handle to a full stroke and wait for 1 minute.
- ④ Unlock the handle and allow it to return slowly into the pump by holding the cylinder and handle securely.

⚠ CAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY. ⚠

- ⑤ If the handle returns completely to the original position, the performance is satisfactory. Otherwise, refer to maintenance procedures shown in the instruction manual of the pump to correct the leakage.

9. USER RESPONSIBILITY:

It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-20, AP-20S, 400B aspirating pump, and that detector tubes are not used beyond their expiration date or have a colour change different to that stated in the Performance specifications. The Manufacturer and Manufacturer's Distributors shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.

※ Product specifications are subject to change without any prior notice.